



 
FRITZ!Box 7530

Installation / Internet Connection

1 1 Connection of the FRITZ!Box

1.1 Connection of the DSL cable

Connect the long grey network cable to your FRITZ!box.

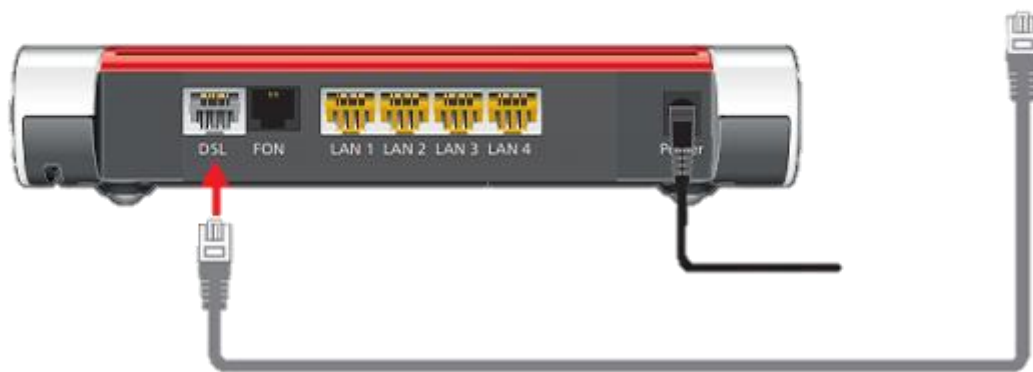

1.2 Connection of the FRITZ!Box with the phone socket

Insert the narrow end of the cable into the phone socket using the supplied Reichle adapter (110).




If your phone socket has a RJ-11 port, you can plug in the cable without using a Reichle adapter.

1.3 Connection of power adapter


Connect the power adapter to your FRITZ!box. The "Power/DSL" lamp will start flashing green when the adapter is connected to the power supply.

The FRITZ!box is now configured automatically. The process takes about 5 - 10 minutes, after which the FRITZ! box detects the Internet connection and, if available, the telephone settings. The FRITZ! box will reboot several times. The "Power/DSL" lamp then stops flashing and lights up constantly green.

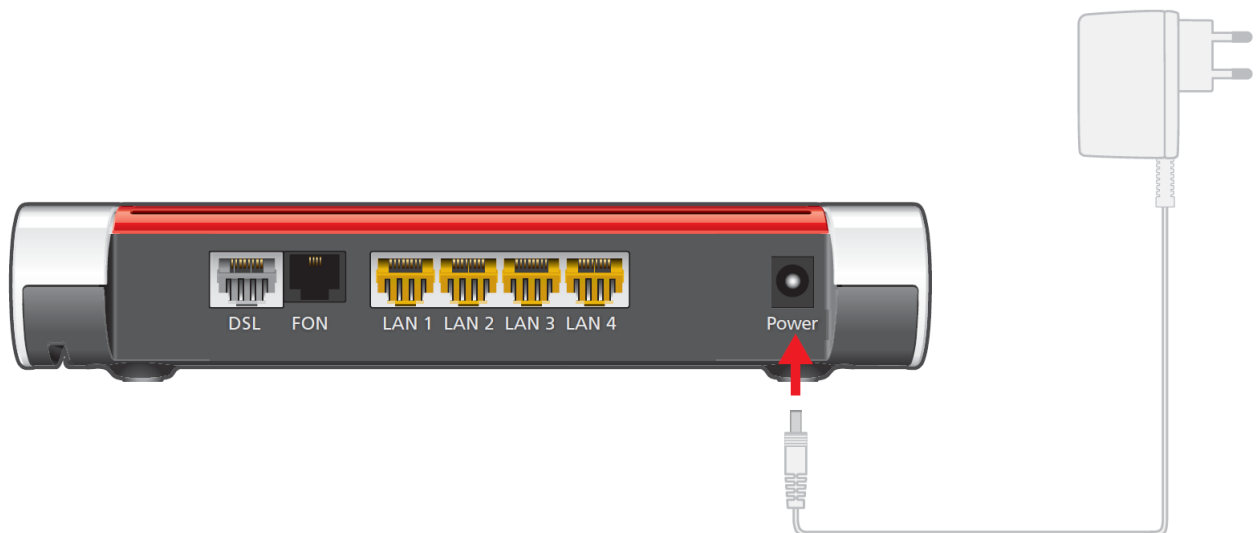

1.4 Description LEDs


Pos.	LED	State	Signification
1	Power/DSL	shining	The FRITZ!box and DSL connection are ready for operation
		Flashing regularly	<ul style="list-style-type: none"> FRITZ!box is started (approx. 2 minutes) The FRITZ!box is ready for operation but the connection to the DSL is interrupted.
		Flashing twice	Connection to DSL is still being established
2	WLAN	shining	WLAN-fonction is activated
		flashing	<ul style="list-style-type: none"> WLAN is switched on or off WPS is executed
3	FON	shining	There is a telephone connection via the Internet.
	DECT	shining	A cordless phone is connected to the Fritz! box via DECT
4	Connect/WPS	Flashing	W-LAN device or DECT device is being registered.
5	Info	flashing green	<ul style="list-style-type: none"> Firmware is updated There are new messages on the FRITZ! box answering machine
		Flashing red	Error on the FRITZ!Box

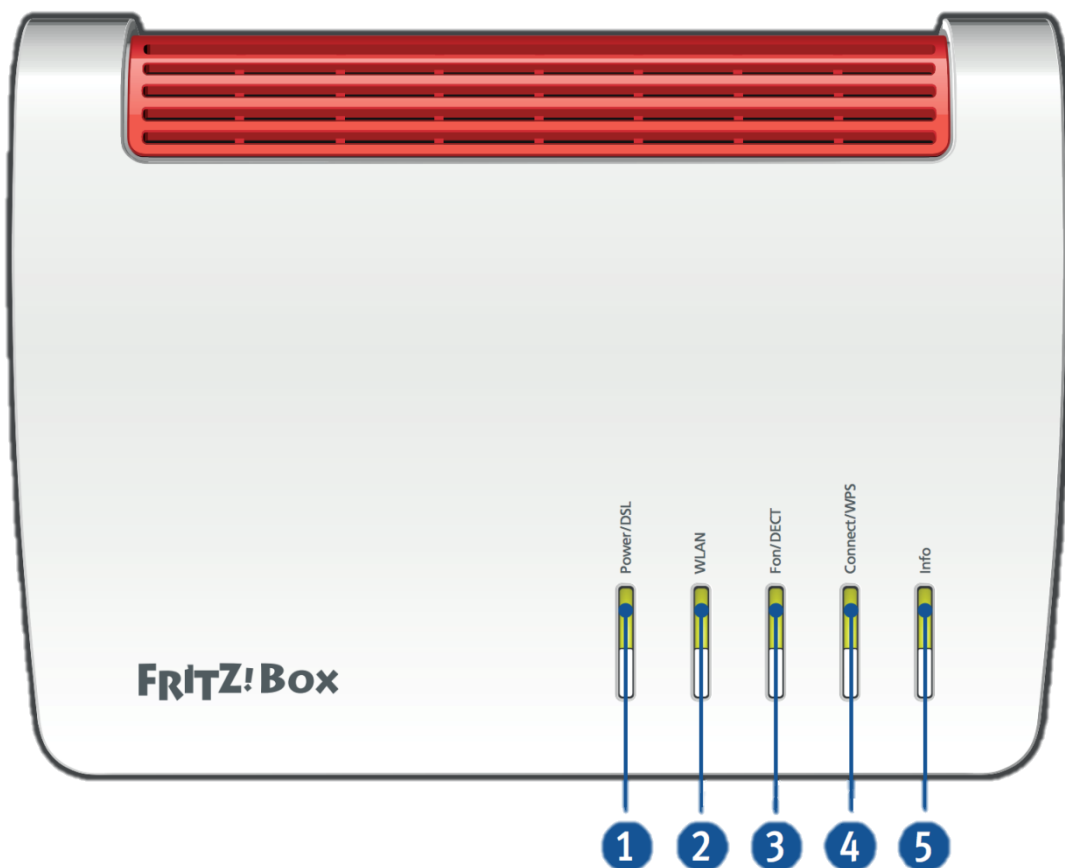

2 Network connection to your Computer

2.1 Connection with network cable

If you want to connect your computer with a network cable, connect the network cable to a free LAN port on the FRITZ! box and to the computer's LAN port.

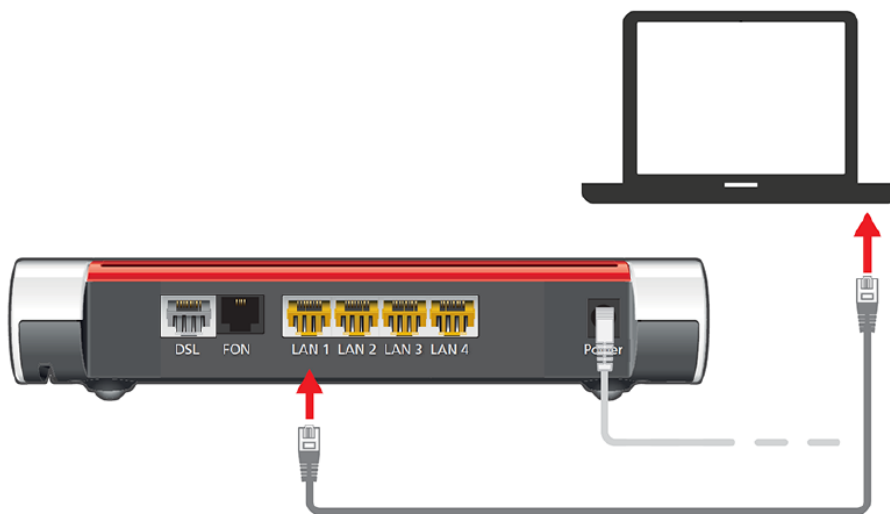

2.2 Wireless network connection

If you want to connect your computer via wireless network connection (WLAN), you need the name of the wireless network connection and the password. The wireless connection for your FRITZ!box has already been preconfigured. The WLAN name (SSID) and the password for the wireless internet connection can be found on the back of your FRITZ!box.



Nr.	Bedeutung
1	Produktname
2	Adresse Benutzeroberfläche
3	Name WLAN-Funknetz (SSID)
4	Kennwort Benutzeroberfläche
5	WLAN-Netzwerkschlüssel
6	Spezifikation Netzteil
7	Seriennummer
8	Artikelnummer

2.3 Access to the Fritz!Box

First of all, you have to connect to the user interface of the Fritz!box. Make sure that your computer is connected to the Fritz!box via LAN cable or WLAN.

Then enter "fritz.box" or "192.168.178.1" in the address line of your Internet browser (e. g. Firefox or Internet Explorer). The FRITZ!box is already password-protected at delivery. This password can be found on the sticker on the bottom of your FRITZ!box. If you have not changed this password, you can use it to access the FRITZ! User Interface.

We are happy to be of service:
Monday – Friday 08.00 – 17.30
Hotline 056 460 23 23



Chat with us live
on our website

moving. forward. together.

Green AG • Industriestrasse 33 • 5242 Lupfig • Switzerland • www.green.ch